



Nivel de Transición por ATC
 Transition Level by ATC

No se ajusta a escala / Not to scale

STAR ERIso 4A / SIRAM 1A

ERISO 4A: Cruzando R084 ARI VOR viraje derecha para interceptar R097 (TR277°) directo a ARI VOR. Cruzar ERIso INT FL210 o superior, D25 ARI FL150 o superior, D11 ARI 10000 FT o superior, ARI VOR 5000 FT o superior, luego según autorización ATC.

ERISO 4A: Crossing R084 ARI VOR right turn to intercept R097 (TR277°) direct to ARI VOR. Cross ERIso INT at or above FL210, D25 ARI at or above FL150, D11 ARI at or above 10000 FT, ARI VOR at or above 5000FT, then according to ATC clearance.

SIRAM 1A: En SIRAM, abandonar AWY para interceptar R199 (TR019°) ARI VOR directo a DONPU INT, luego directo a EDNUR INT para interceptar R206 (TR026°). Cruzar DONPU INT 8000 FT o superior, EDNUR a 5000 FT o superior. Luego según autorización ATC.

SIRAM 1A: At REPUK INT, leave AWY to intercept R199 (TR019°) ARI VOR direct to DONPU INT, then direct to EDNUR INT to intercept R206 (TR026°). Cross DONPU INT at or above 8000 Ft, EDNUR INT at or above 5000 FT. Then according to ATC clearance.

DASA / SECCION AIS-MAP