



**ARICA**

APP	119.9
TWR	118.5

Nivel de Transición by ATC  
 Transition Level by ATC

No se ajusta a escala / Not to scale

**STAR ERIso 2A / REPUK 2A**

**ERISO 2A:** Cruzando R081 ARI VOR viraje derecha para interceptar R094 (TR274°) directo a ARI VOR. Cruzar ERIso INT FL210 o superior, D25 ARI FL150 o superior, D11 ARI 10000 Ft o superior, ARI VOR 5000 FT o superior, luego según autorización ATC.

**ERISO 2A:** Crossing R081 ARI VOR right turn to intercept R094 (TR274°) direct to ARI VOR. Cross ERIso INT at or above FL210, D25 ARI at or above FL150, D11 ARI at or above 10000 Ft, ARI VOR at or above 5000FT, then according to ATC clearance.

**REPUK 2A:** En REPUK INT, abandonar AWY para interceptar R194 (TR014°) ARI VOR directo a VUKOD INT, luego directo a EDNUR INT para interceptar R204 (TR024°). Cruzar VUKOD INT 8000 Ft o superior, EDNUR a 5000 FT o superior. Luego según autorización ATC.

**REPUK 2A:** At REPUK INT, leave AWY to intercept R194 (TR014°) ARI VOR direct to VUKOD INT, then direct to EDNUR INT to intercept R204 (TR024°). Cross VUKOD INT at or above 8000 Ft, EDNUR INT at or above 5000 FT. Then according to ATC clearance.

DASA / SECCION AIS-MAP