



ANTOFAGASTA
 RDR 120.9 / 119.3
 TWR 118.1

Nivel de Transición by ATC
 Transition Level by ATC

No se ajusta a escala / Not to scale

STAR BORO 8

Establecido en R008 (TR188°) FAG VOR/DME, cruzar D35 N FAG 8000 Ft o superior, D24 N FAG 6000 Ft o superior, IRIKI INT 4500FT o superior, luego según autorización ATC.

Established on R008 (TR188°) FAG VOR/DME, cross D35 N FAG at or above 8000 Ft, D24 N FAG at or above 6000 Ft, IRIKI INT at or above 4500FT, then according to ATC clearance.

STAR LOA 9

En AWY T-103, cruzar R035 FAG VOR/DME FL130 o superior, cruzar R020 FAG VOR/DME 8000 Ft o superior, cruzar R010 FAG VOR/DME 6000 Ft o superior, posterior directo a IRIKI INT 4500FT o superior, luego según autorización ATC.

On AWY T-103, cross R035 FAG VOR/DME at or above FL130, cross R020 FAG VOR/DME at or above 8000 Ft, cross R010 FAG VOR/DME at or above 6000 Ft, then direct to IRIKI INT at or above 4500FT, then according to ATC.